


# liftcontrol

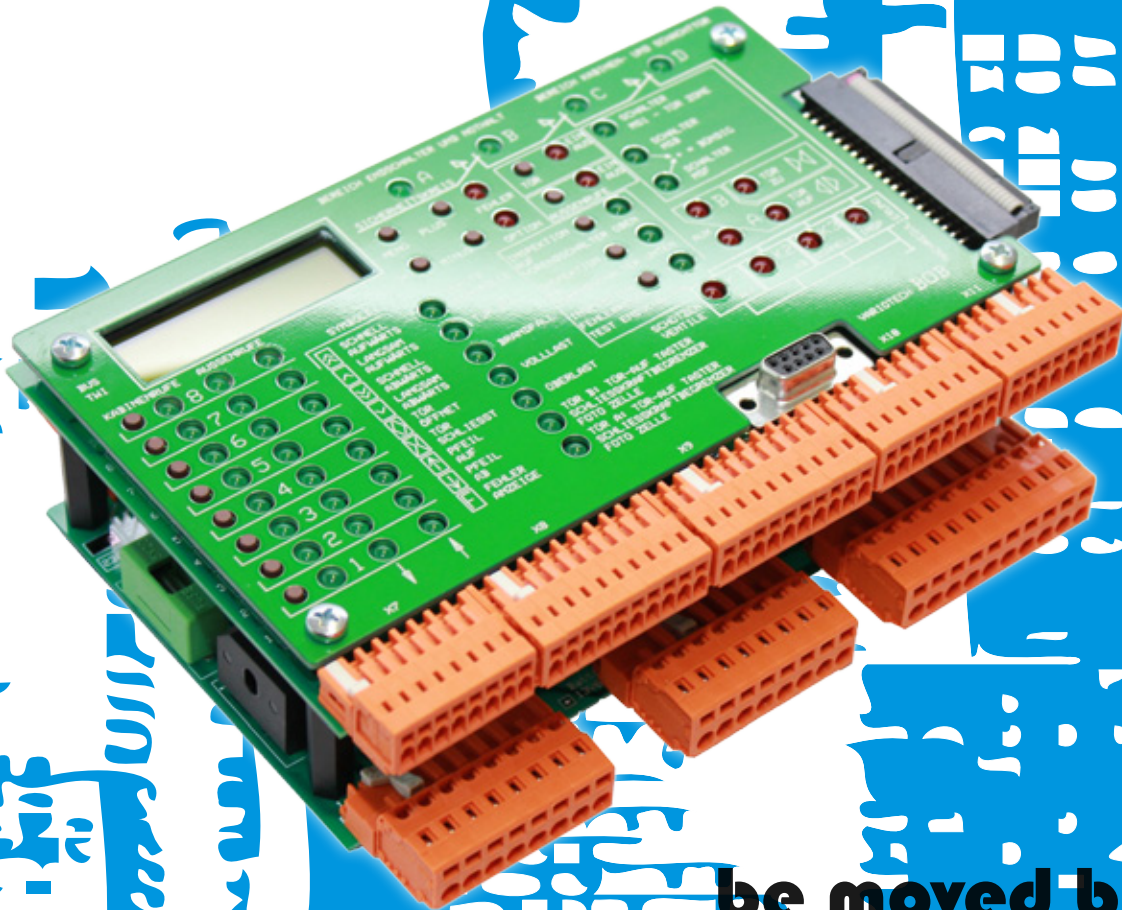

**be moved by BOB.**

The lift control board BOB 8 meets the directives 95/16/EG of the EU and the EN81.

It is possible to use BOB as a push button control, down collective control (12 stops) or full collective control (8 stops). Beside it is possible to control 2 car doors. LEDs display the functions of all inputs and outputs of the control. Additionally you can see the complete safety circuit on the front plate of the control board. The current operating functions like driving direction, car position, drive counter and possible faults are displayed on the LCD.

## Discover Simplicity. Discover BOB.

### Integrated basic functions

- » Error monitoring
- » Parameter setting
- » Inspection drive
- » Reset drive
- » Parking floor
- » Re-leveling
- » Car light with adjustable timer
- » Floor-based arrival arrows
- » Control input for fullload, overload
- » Short distance stops
- » selective doors

### Additional integrated functions

- » Motor temperature control (using NTC sensor or switch)
- » Battery charger
- » Phase direction sequence control
- » Contactor monitoring according EN81
- » Output for emergency light
- » Output for an optical floor level indicator. (with LED)
- » On/Off switch for door function
- » On/Off switch for landing calls
- » Direct call buttons for every stop
- » Direct buttons for inspection drive